

KIENZLE

Assembly instructions:

Kienzle lighting head on Leitz Valoy 2 enlarger



What is needed:

- Kienzle lighting head (different versions)
- Leitz Valoy 2 lighting head carrier
- Kienzle adapter (2 parts, plate + funnel)
- four M3x8 Phillips countersunk head screws
- four M3x5 Phillips cylinder head screws
- four Phillips sheet metal screws

Preparation:

1. Remove the original Leitz Valoy 2 head from the lighting head carrier.
2. Remove the lighting head carrier from the column frame.




1.) Screw the adapter plate to the lighting head carrier. Use the four M3x8 countersunk screws.





2.) Screw the adapter funnel to the adapter plate. Use the four M3x5 cylinder head screws with washer..




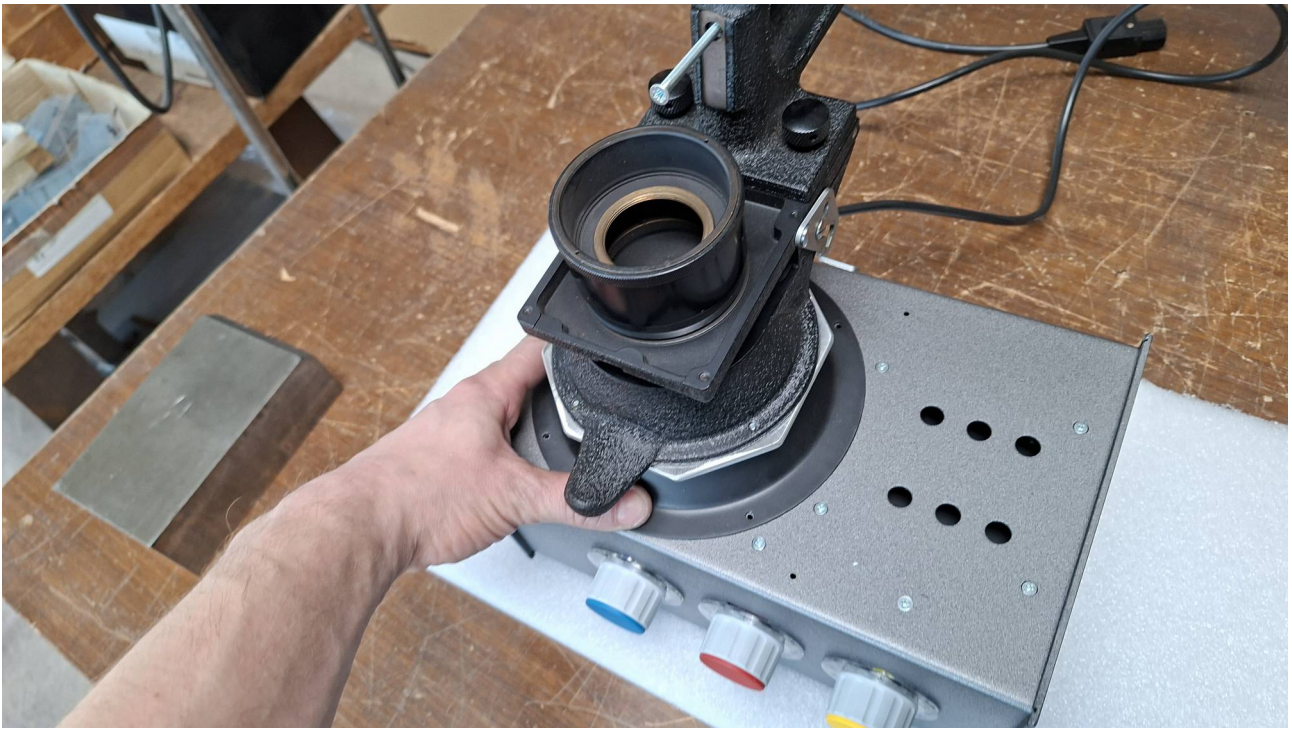

3.) Place the Kienzle lighting head upside down on the table and place the lighting head carrier onto the designated holes.



4.) Screw the lighting head and adapter together. Use the four Phillips sheet metal screws.

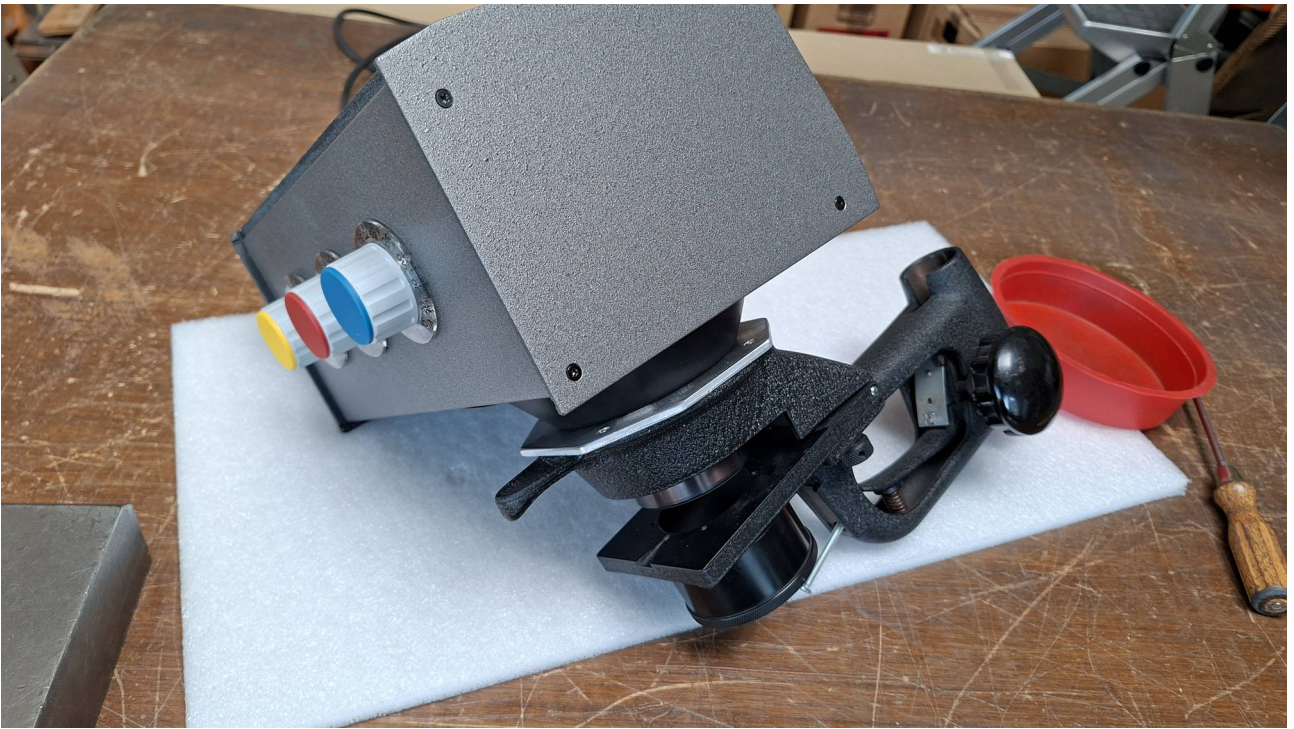

The Kienzle lighting head is now mounted on the Leitz Valoy 2 lighting head carrier and can be remounted on the column frame.